

# Astragal Upper Bolt Sleeve

## Replacement Instructions

### Tools Required:





Phillips  
Screwdriver

### Bolt Sleeve is Compatible With:


- Multi-Point Astragal (shown in images)
- Ultimate Trilennium® Astragal

### Before You Begin:


Make sure the bolts are retracted and unlocked

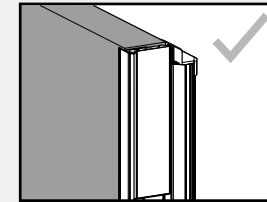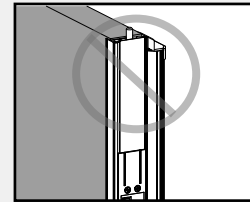


## STEP 1: REMOVE THE OLD UPPER BOLT SLEEVE

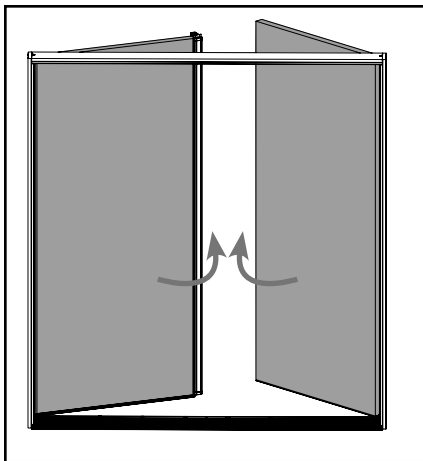


**a.** Open both door panels to access the astragal on the inactive door panel.

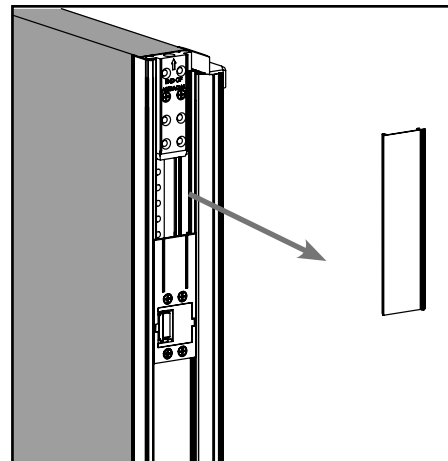

**b.** Remove the trim strip covering the upper bolt sleeve.

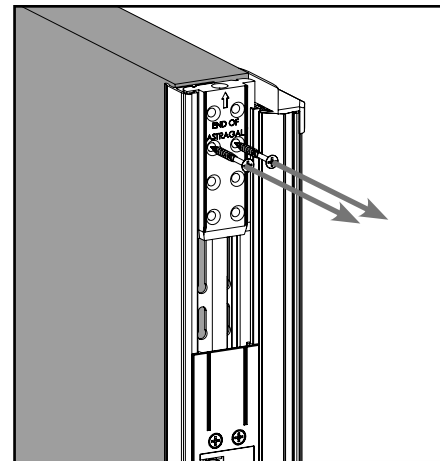


**c.** Remove the screws securing the upper bolt sleeve and set aside.

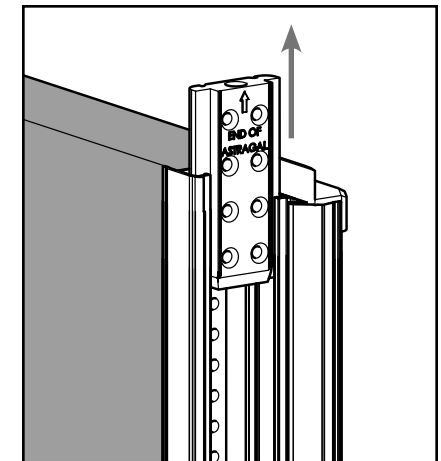


**d.** Slide out the upper bolt sleeve from the astragal body and discard.




## STEP 2: INSTALL THE NEW BOLT SLEEVE

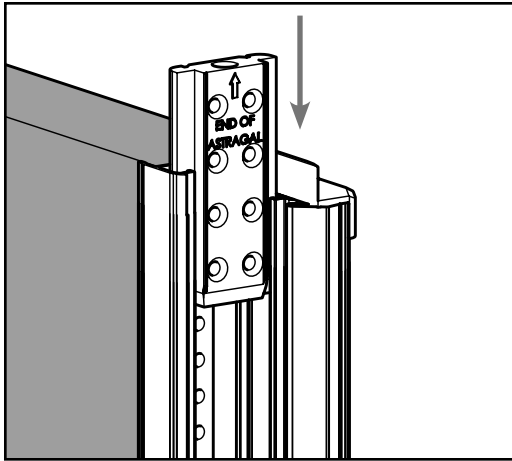


a. Slide the new bolt sleeve into the astragal body, with the bolt pin through the hole in the bolt sleeve.

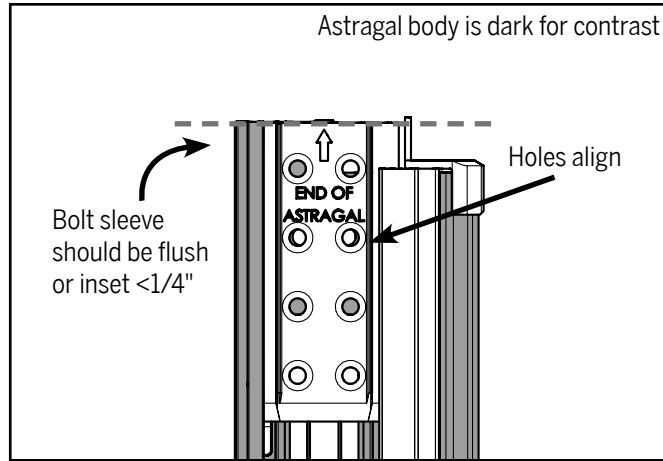


b. Align the bolt sleeve flush with the top of the astragal body to align the holes with the holes in the body. If the holes do not align, inset the bolt sleeve no more than  $1/4''$  until the holes align.

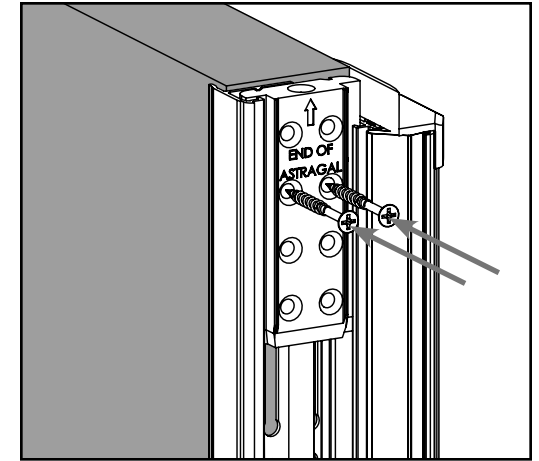

c. Secure the bolt sleeve to the astragal by reinstalling the screws that were previously removed.

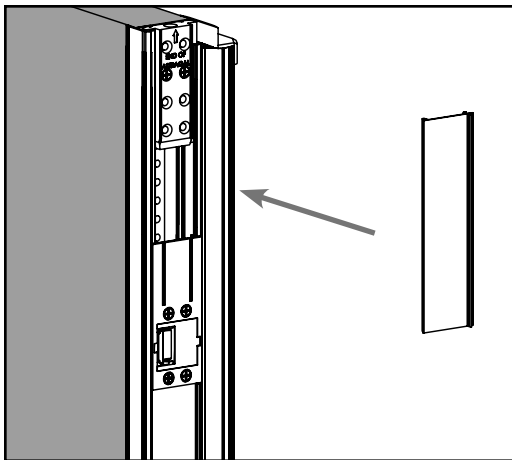

d. Reinstall the trim strip to the astragal, ensuring the sealing fin is next to the weatherstrip.

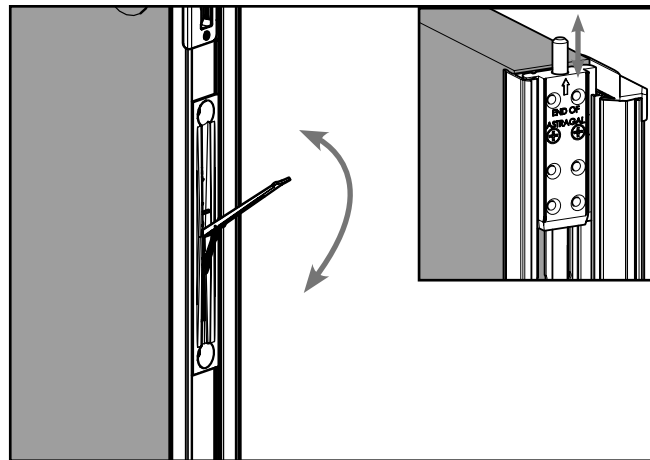

e. Engage the flip lever and ensure both the upper bolt moves in and out smoothly.

**NOTE:** If retracting the upper bolt is tight, loosen the screws on the bolt sleeve.