



Door System Installation Instructions

 
These instructions apply to the following door systems:



Single Doors



Single & Double Continuous Sidelite Units



French & Patio Units

Installation Checklist

- ☐ **Clean, dry, level, and solid subfloor (1)**
- ☐ **Three beads of caulk under the Sill (2)**
- ☐ **Ensure consistent margins (5)**
- ☐ **Adjust the Sill Cap or Door Bottom (8)**
- ☐ **Install Simple Solution® Corner Pads (8)**
- ☐ **Caulk corner of Sill and Jamb (9)**
- ☐ **Position & Install Astragal (French Units) (10)**
- ☐ **Caulk and flash unit perimeter (11)**

Installation Tools and Materials

Installation will require the following tools and materials:


- Level - 3' and 6'
- Tape measure
- Masonry string
- Caulking/Sealant- (a) polymer based sealant, such as Bostik Pro-MS 50, (b) polyurethane sealant, or (c) 100% silicone sealant.
- Caulking gun
- Shims (material type compliant with applicable building code requirements)
- #8 x 2-1/2" exterior grade screws (or alternate size compliant with applicable building code requirements)
- 8d finishing nails, exterior grade
- #2 Phillips screwdriver
- Driver with #2 Phillips bit
- Simple Solution Corner Pads

Note- Other tools and materials may be required due to rough opening conditions or applicable building code requirements.


General Notes

- Endura recommends that the installer understand the hazards of handling material with lead paint. More information is available at www.epa.gov/lead.
- Construction waste should be disposed of properly.
- Applicable building codes supersede this instruction where differences arise.
- Endura cannot be held liable for defects or deficiencies resulting from improper use of these installation instructions or failure to follow building codes.
- This instruction assumes a typical wood frame wall installation. Adjustments may be required for other wall types.
- This instruction assumes that an appropriate weather-resistant barrier is applied to the rough opening and integrated with the door unit, as required by local building codes and/or manufacturer's instructions.
- This instruction applies to both inswing and outswing doors, except where noted.
- This instruction applies to both adjustable and fixed sills, except where noted.

1 Preparing the Rough Opening

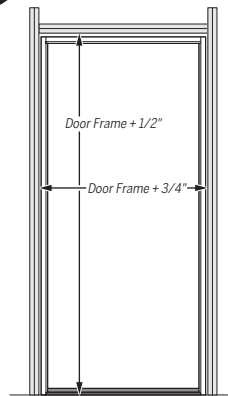

Rough Opening: Dimensions

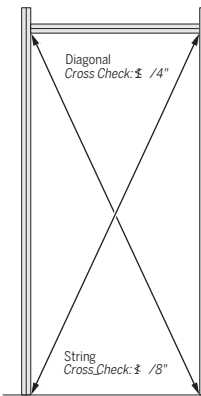


Rough Opening: Cross Check

Rough Opening Dimensions: Height = Door Frame + 1/2"
Width = Door Frame + 3/4"

Diagonal Distances should be within 1/4" of each other.

 Diagonally placed strings should be within 1/8" of each other at the center.




The rough opening should be flashed according to local building code requirements.


- ❓ Are the walls straight?
- ❓ Is the rough opening framing plumb & level?
- ❓ Is the subfloor clean, dry, level and solid?

If you are using a height plate to bring the sill up to the level of the finished floor covering:

 Be sure that it is at least as wide as the sill and as long as the rough opening.




Be sure to caulk thoroughly under and around the height plate.

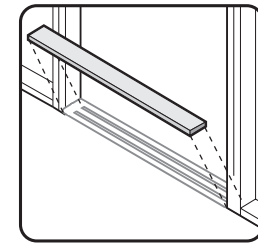

Check both sides


2 Caulking the Rough Opening

NOTE: Where Caulking is required a polyurethane, 100% silicone, or polymer- based exterior grade sealant may be used.

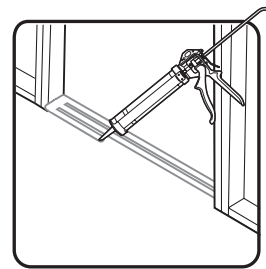


Place three heavy beads (1/2" wide) of sealant on the subfloor or height plate as shown.

Put enough caulk at the ends to completely cover the bottom of the side jamb.

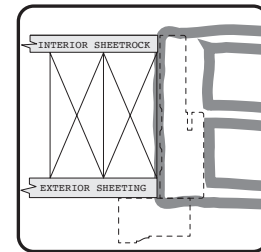


Apply a continuous 1/2" bead sealant to sheathing side of brickmould or exterior trim (ensure that sealant is compatible with sheathing, housewrap or flashing at rough opening).

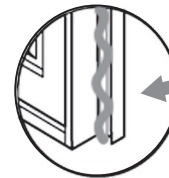


2a Optional Sill Pan

An Endura approved Sill Pan may be used in Force 5 Systems, but is not required.

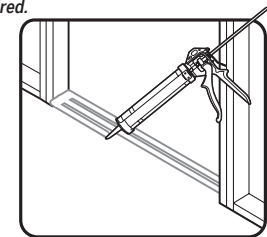


1. Place three heavy beads (1/2" wide) of sealant on the subfloor or height plate as shown.

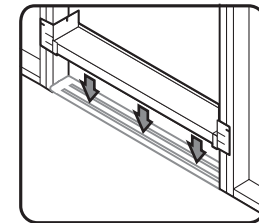


2. Place and secure Endura approved Sill Pan according to separately issued Endura Instructions.

3. Seal Interior Edges
Perform after door unit is anchored into rough opening.

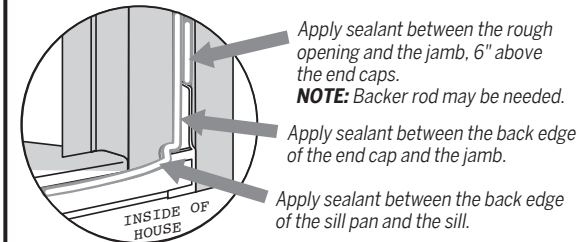


3 Position Unit in Rough Opening

Pivot into position taking care not to wipe away subfloor caulking.

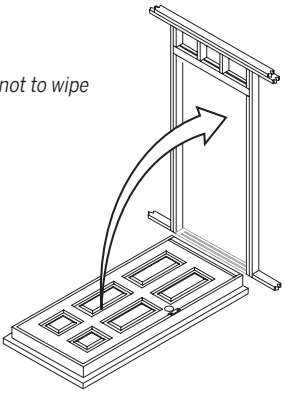


Temporarily secure using finishing nails through the brickmould. Do not fully set nails.

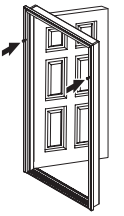


Ensure that unit is plumb in each direction.

Ensure that inside edge of door unit projects 1/2" past stud interior surface for proper alignment with drywall.

 
Place fasteners through thick part of jambs as shown, just above the hinge positions on the hingejamb. Do not fully seat. Use 3 screws for 7/0 & shorter units, & 4 screws for 7/5 & taller units.



Single Units:
Fasten Hinge Jamb first

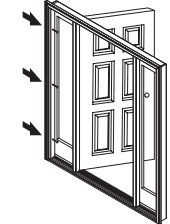


Sidelite Units:
Fasten Sidelite Jamb on Hinge Side first

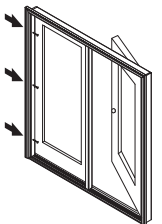

French & Patio Units:
Fasten Jamb on fixed or passive side panel first

For systems with brickmould or other exterior trim, assure that back side of moulding is up against exterior sheathing.

Note: Do not secure door unit only through brickmould or other exterior trim.

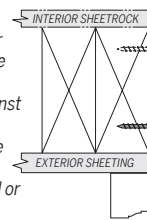

Alternate screw location - do not damage weatherstrip

Use #8 x 2-1/2" wood screw or equivalent fastener. Do not fully seat.



Note: Door units installed in high velocity wind zones will require anchoring according to approved requirements.

4 Shim and Secure Hinge Jamb

Temporarily install Simple Solution® Pads but do not remove adhesive backing paper yet (see Step 8 for pad positioning).


Check hinge jamb for plumb in both directions with a 6-foot level.

Place shims behind jamb hinges. Adjust shims to take up space between jamb and rough opening. **Note:** In some cases, the rough opening is plumb and allows the door jamb to be placed against the rough opening. Shims on this side will not be required.

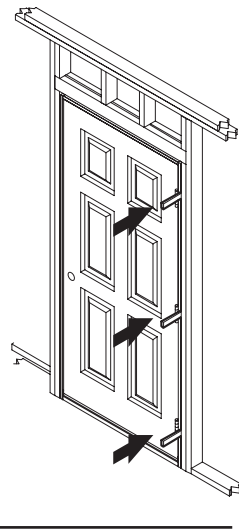
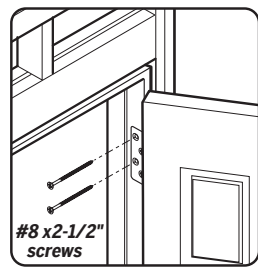


On top hinge, replace 2 short screws closest to weatherstrip with 8 x 2-1/2" screws.

On all other hinges, replace top screw closest to weatherstrip.

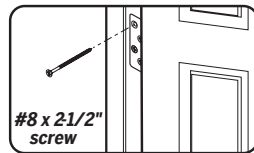

Set each jamb screw through shims, then remove excess shim.

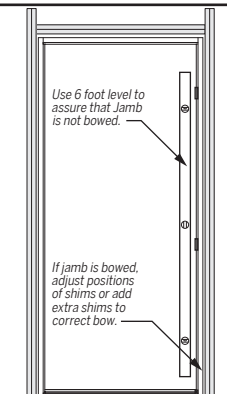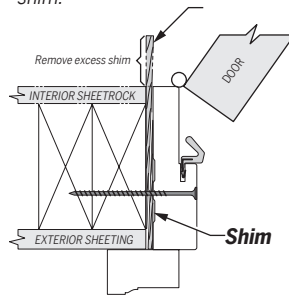

Note: Make sure the jamb is not bowed. Adjust or apply additional shims as necessary.

5 Shim and Secure Opposite Jamb

Check jamb for plumb in both directions with a six foot or longer level.

Install shims across from each hinge and adjust to ensure a 1/8" consistent margin between door panel and jamb.



Adjust the frame so it is flush with the face of the door.

Check the weatherstrip contact for even compression all around the door.

Set each jamb fastener through shims.

Remove excess shims when done.

Note: Make sure the jamb is not bowed. Adjust or apply additional shims as necessary.

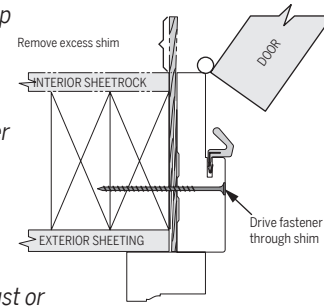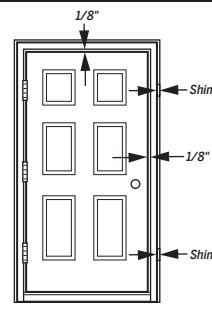

10 Astragal Positioning (French Units only)


Close the passive door to verify that it is in the desired position.

Push bolt pins to contact header and sill, then mark positions for retainer holes.

*For Z Articulating Cap, only the header mark is required.

Complete installation and positioning of astragal according to Endura's "Field Installation Instructions" provided with the French unit.

The strikes should be adjusted in the direction of door closure to assure that the strikes pull the door up to the weatherstrip tightly.


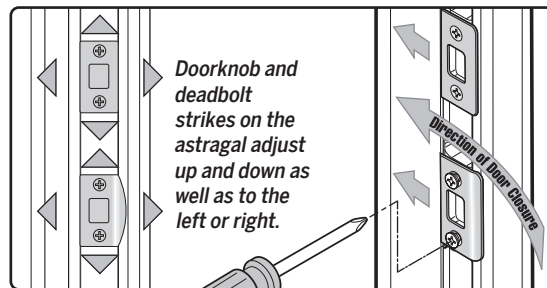


6 Securing Lockset Hardware

Install lockset hardware.



With door closed, shim behind strike and deadbolt plates to maintain proper margin.

Secure each plate with two #8 x 2-1/2" screws through the shim and into the rough stud. Remove excess shim.

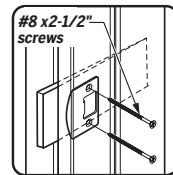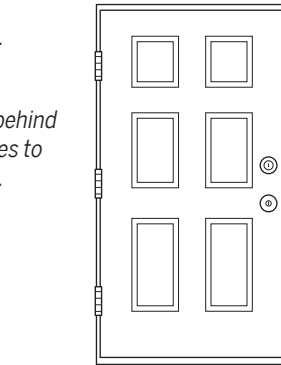

7 Shim and Secure Header

Secure fasteners through thick part of header. Use shims at each location indicated by (X) to maintain proper margin.

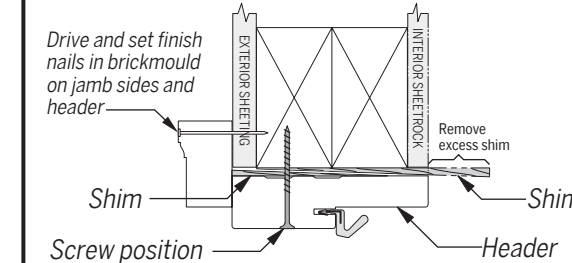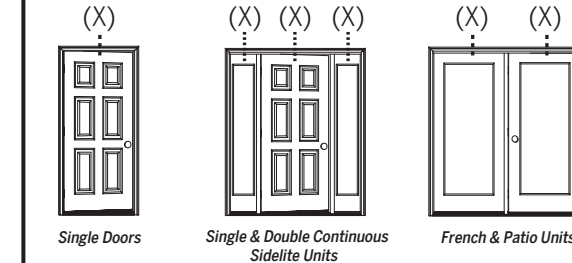


8a Adjust Sill Cap - Adjustable Sills Only


Remove temporarily installed Simple Solution® Corner Pads.

If necessary, adjust the sill cap to ensure consistent spacing between panel and cap.

*Does not apply to Z Articulating Cap

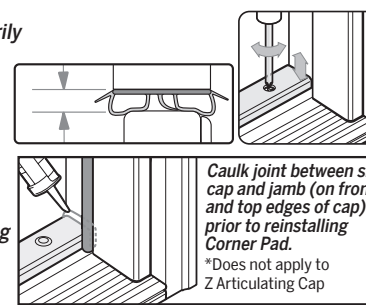

8b Adjust Door Bottom - Fixed Sills W/ Adjustable Sweep

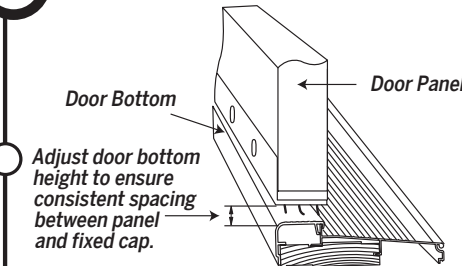


8c Simple Solution Positioning

Verify proper installation of Simple Solution® Corner Pads


To install Simple Solution Corner Pads, remove paper backing to expose adhesive, and press firmly into place. For margins less or equal to than 5/32", apply the corner pad with the edge flush against the weatherstrip kerf, and for margins greater than 5/32", apply the corner pad with the edge flush against the interior jamb. Pads not required on outswing jambs.

On Adjustable Sills/ Oak Anchored Caps Corner Pad must contact the top of the sill cap.

For Z-Articulating Caps, the Simple Solution Corner Pad must contact the top surface for the Z-End Base™.

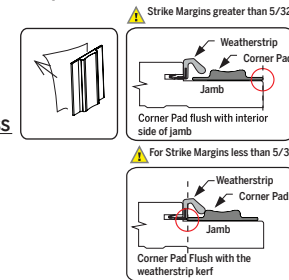

Z-Adjustable Sills

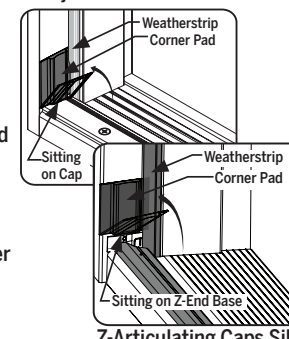




9 Caulking Sill (Optional for Z-Articulating Caps Sills)

Caulk the intersection of the aluminum sill deck and the jamb.

Seal front bottom edge of sill. *Do not caulk the front bottom edge of the sill when using a sill pan.

Caulk around the intersection of the mull and the door sill.

If a sill extender is installed, apply a bead of caulk where the extender meets the sill deck.

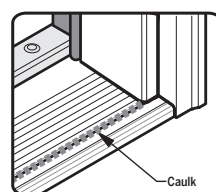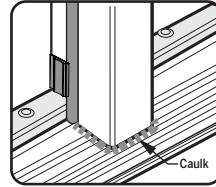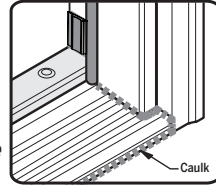

www.enduraproducts.com

Force 5 and Simple Solution are registered trademarks of Endura Products, Inc. All rights reserved.

Patented and Patents Pending visit www.enduraproducts.com