

## FACEPLATE REPLACEMENT INSTRUCTIONS

### Parts Required

- Replacement Faceplate
- Replacement Screws

### Tools Required



- T-15 Torx Screwdriver
- #2 Phillips Screwdriver

### ⚠ Note

If lock is installed into a hung door panel, the installation screws should never be removed without a handleset or construction handle installed, otherwise the lock may fall out of the panel.

### Remove Old Faceplate

- Open door to expose faceplate.
- Using the T-15 Torx screwdriver remove the Torx drive faceplate screws.
- Using the #2 Phillips screwdriver remove the installation screws securing the lock to the panel.
- Remove old faceplate.

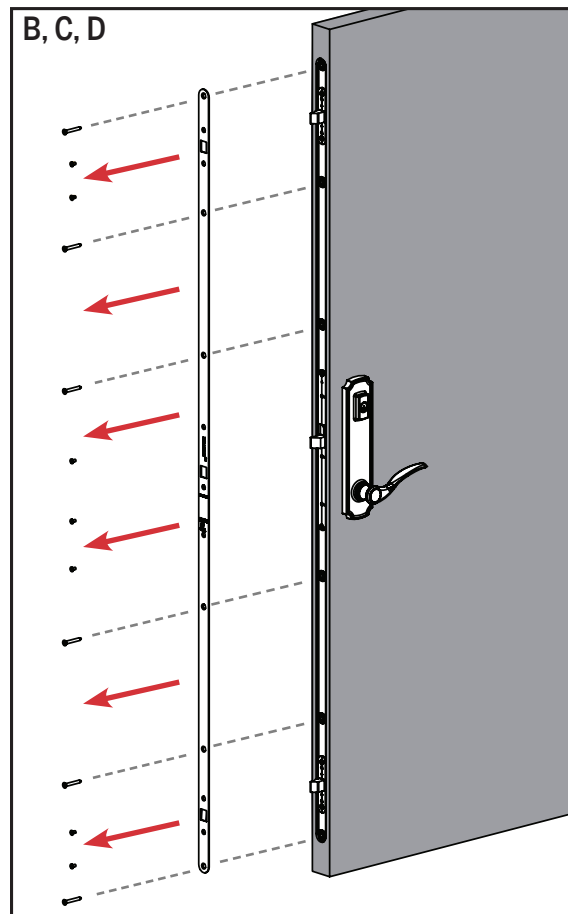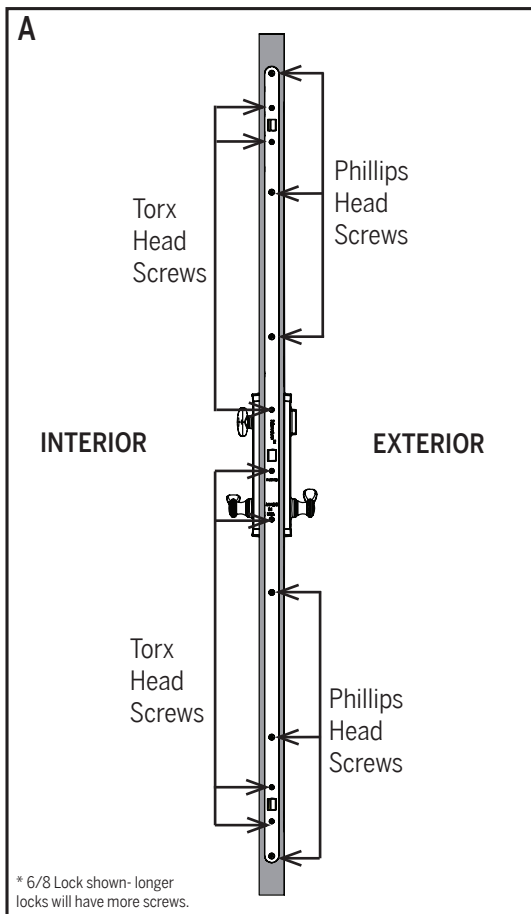

## FACEPLATE REPLACEMENT INSTRUCTIONS


### Install New Faceplate

- A. Replace faceplate with new faceplate, and hold in place. Orient as shown below.
- B. Using a T-15 Torx Screwdriver, replace faceplate torx screws.
- C. Using a #2 Phillips Screwdriver, replace the installation Phillips screws.


### Note

Hand tighten all screws, do not over tighten. Do not use a power drill.

Torx Screw

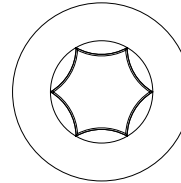


Phillips Screw

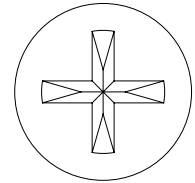

A

Orientation of Faceplate

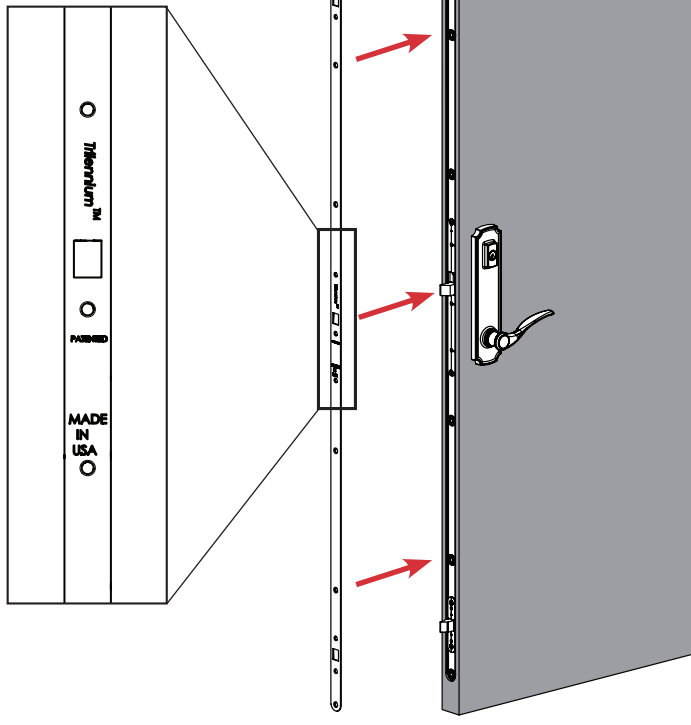

B, C

