

FACEPLATE REPLACEMENT INSTRUCTIONS

Parts Required

- Replacement Faceplate
- Replacement Screws

Tools Required

 

- T-15 Torx Screwdriver
- #2 Phillips Screwdriver

⚠ Note

If lock is installed into a hung door panel, the installation screws should never be removed without a handleset or construction handle installed, otherwise the lock may fall out of the panel.

Remove Old Faceplate

- Open door to expose faceplate.
- Using the T-15 Torx screwdriver remove the Torx drive faceplate screws.
- Using the #2 Phillips screwdriver remove the installation screws securing the lock to the panel.
- Remove old faceplate.

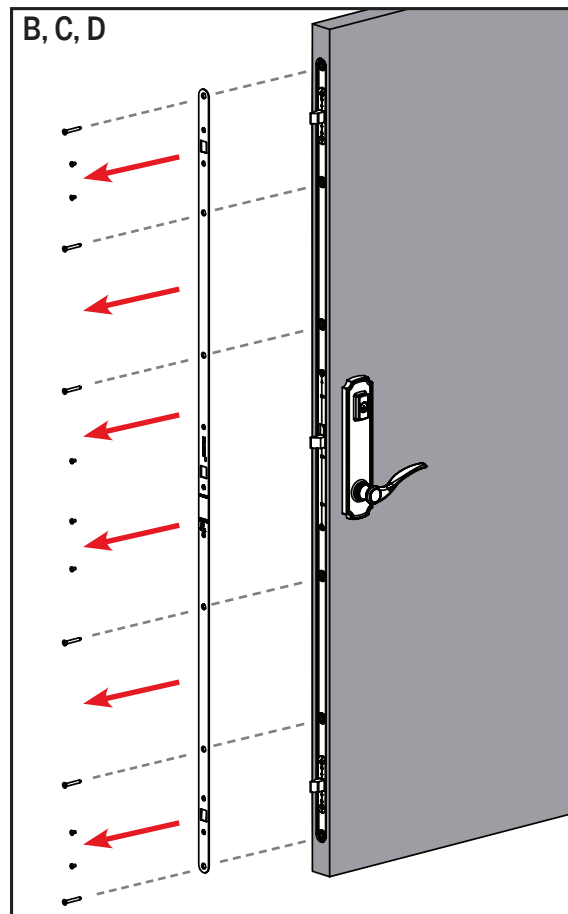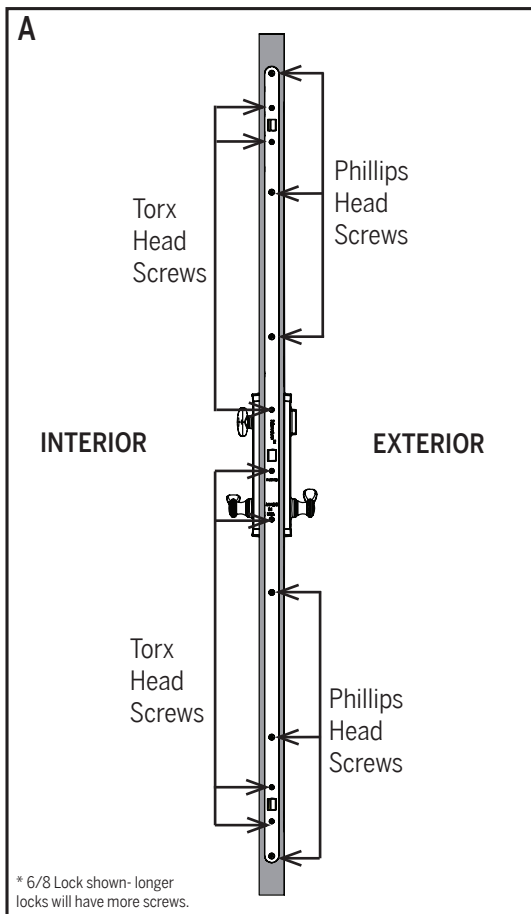

FACEPLATE REPLACEMENT INSTRUCTIONS


Install New Faceplate

- Replace faceplate with new faceplate, and hold in place. Orient as shown below.
- Using a T-15 Torx Screwdriver, replace faceplate torx screws.
- Using a #2 Phillips Screwdriver, replace the installation Phillips screws.


⚠ Note

Hand tighten all screws, do not over tighten. Do not use a power drill.

Torx Screw

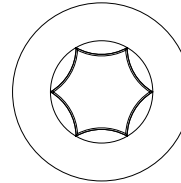


Phillips Screw

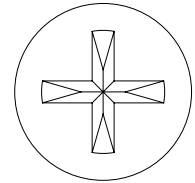

A

 Orientation of Faceplate

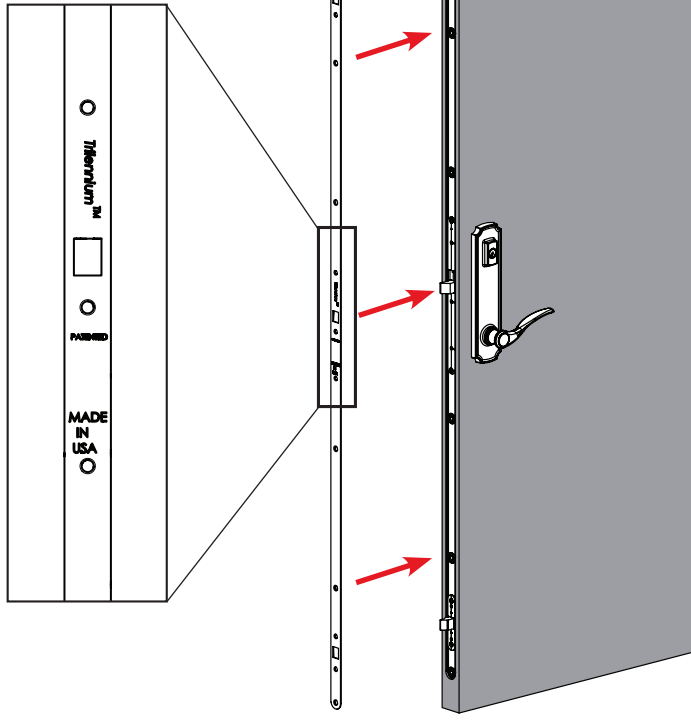

B, C

