

Z-Series Sill Gasket

Attachment Instructions



8817 West Market Street, Colfax, NC 27235
 800.334.2006 Fax: 336.668.4478
 www.enduraproducts.com





STEP 1: SELECT APPROPRIATE GASKET

| Sill Width | Gasket Width | | | |
|------------|------------------------|------------------|--------------|---------------|
| | Inswing Adjustable Cap | Inswing Z-AC Cap | Outswing Cap | Sidelite Seat |
| 4-9/16" | 4-9/16" | N/A* | 5" | 4-1/2" |
| 5-5/8" | 4-9/16" | N/A* | 5" | 4-1/2" |
| 5-13/16" | 4-9/16" | N/A* | 5" | 4-1/2" |
| 7-13/16" | 6-9/16" | N/A* | 5" | 4-1/2" |

Note: Sill gasket size matches or is close to jamb size. Each sill gasket has a left and right version.

STEP 2: APPLY GASKET

- a. Remove gasket from roll.
- b. Apply gasket to sill at each end.

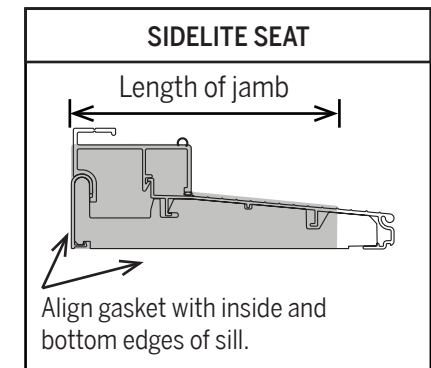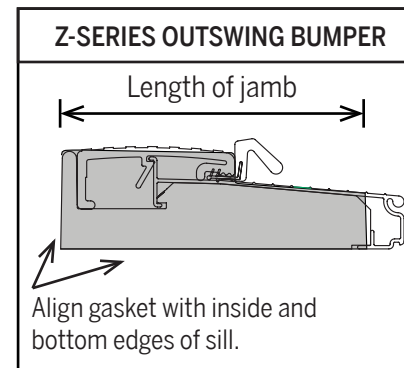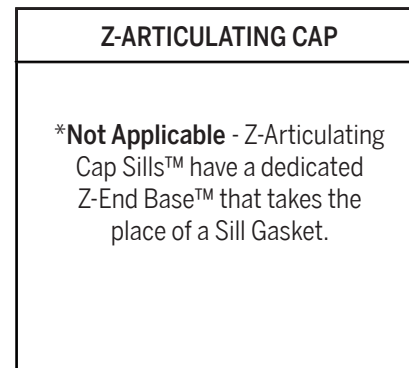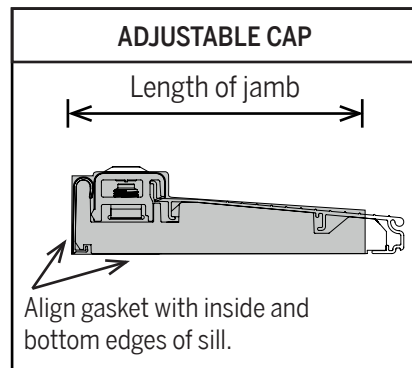

- c. Press gasket firmly against sill.