

Z-Series Sill Gasket

Attachment Instructions



8817 West Market Street, Colfax, NC 27235
 800.334.2006 Fax: 336.668.4478
 www.enduraproducts.com





STEP 1: SELECT APPROPRIATE GASKET

Sill Width	Gasket Width			
	Inswing Adjustable Cap	Inswing Z-AC Cap	Outswing Cap	Sidelite Seat
4-9/16"	4-9/16"	N/A*	5"	4-1/2"
5-5/8"	4-9/16"	N/A*	5"	4-1/2"
5-13/16"	4-9/16"	N/A*	5"	4-1/2"
7-13/16"	6-9/16"	N/A*	5"	4-1/2"

Note: Sill gasket size matches or is close to jamb size. Each sill gasket has a left and right version.

STEP 2: APPLY GASKET

- a. Remove gasket from roll.
- b. Apply gasket to sill at each end.

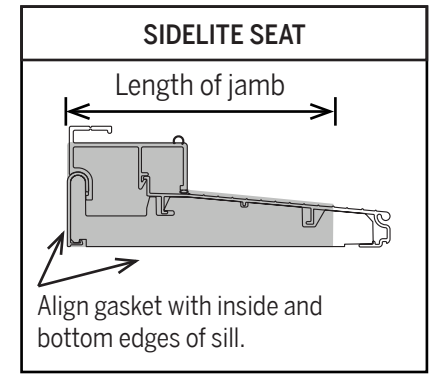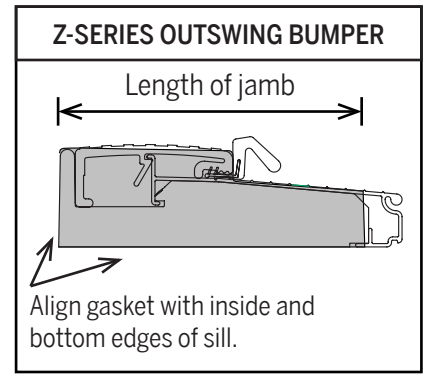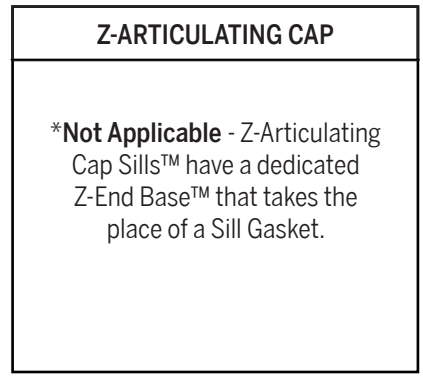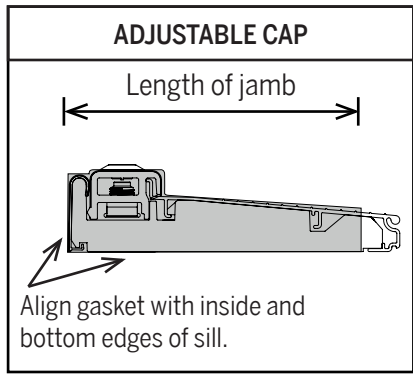

- c. Press gasket firmly against sill.