## **Endura Z-End Bases™ for Z-Articulating Cap Sill®**








**Note:** In order to install a new Z-End Base<sup>™</sup>, the sill must be uninstalled.

## **TOOLS AND SUPPLIES:**


Stapler with 1/2" crown staples

## STEP 1: PLACE THE Z-END BASE™

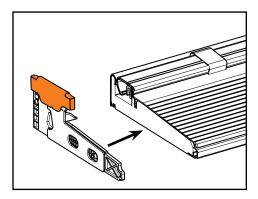

a. Place the Z-End Base<sup>TM</sup> against the end of the <u>uninstalled</u> sill as shown in image.

**Note:** Z-End Bases<sup>TM</sup> are handed and can only be placed one way.

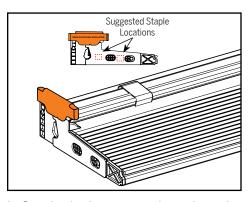

b. Staple the base onto the side in the locations shown. Repeat this on the other end of the sill with the other Z-End Base $^{\text{TM}}$ .

**Note:** Leave the protective orange gasket on. Only remove after the door unit is fully installed.



8817 West Market Street, Colfax, NC 27235 800.334.2006 Fax: 336.668.4478 www.enduraproducts.com