

Trilennium[®] Mortise Lock

Old vs. New Styles

If you are replacing your Trilennium handset and encounter difficulties with installation, it could be due to a mismatch between the mortise lock design and the handset. If you have an older lock (prior to 2005), the location for the mounting screw is a **hole**, compared with the **slot** in the newer designs (post 2005).



OLD STYLE


Round Mounting
Screw Hole



NEW STYLE

Slot for
Mounting
Screw

To make your old mortise lock compatible with the new handsets, you will need to remove the lock from the door panel to modify it. Once it is removed, cut up vertically from the edge of the lock to meet the screw hole, as shown in the image below.

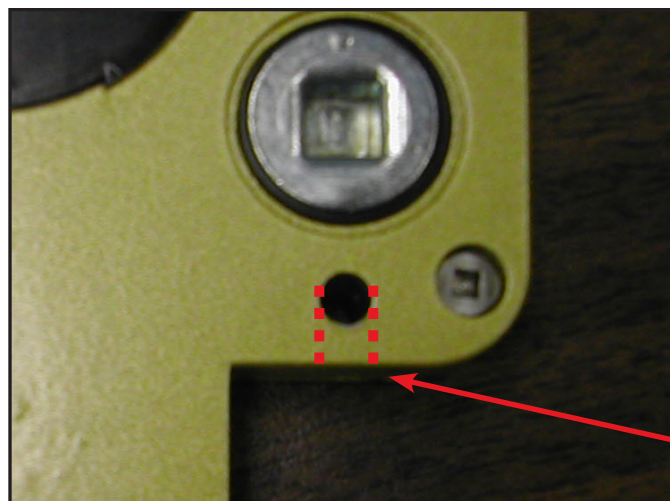

Cut up vertically from the
edge of the lock to meet
the screw hole.