Snap-In Retainers and Dummy Strike Plate

Replacement Instructions

Tools Required:

- Utility Knife
- Flathead Screwdriver


Kit Includes:

- Snap-In Strike Retainer
- Dummy Strike Plate




8817 West Market Street Colfax, NC 27235 | 800.334.2006 www.enduraproducts.com

STEP 1: REMOVE DAMAGED OR OLD STRIKE PLATES AND STRIKE RETAINERS

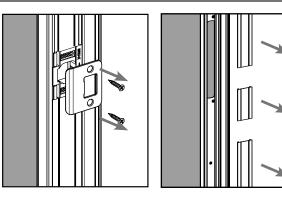


a. Remove damaged or old strike plates and strike retainers and discard. If necessary, remove the trim strip and set aside.


STEP 2: REPLACE WITH NEW STRIKE RETAINER

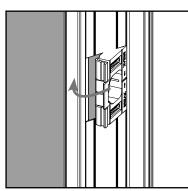

a. Angle the strike retainer and rotate it into the astragal body.

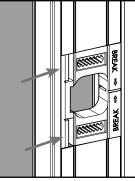


b. Press lightly against the two tabs, and snap the retainer into place.

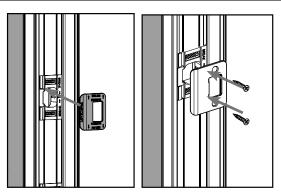


c. Install the strike plates onto the strike retainers. Dummy plates included in the kit can be pressed into the retainers. Alternately, final metal hardware may be installed.

If the mounting holes on the strike plates are greater than 1-5/8" center to center:



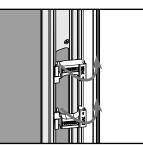

d. Break retainer in half using the bend lines. Insert the two pieces of the retainer to the astragal by pressing the tabs to snap into place.

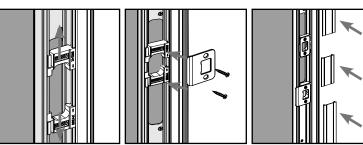

e. Adjust the location of the two pieces of the retainer and install the new hardware. Replace trim strip if it was removed.

Rev. Date: 08.16.2017 ©2017 Endura Products, Inc. Innovation protected under patents and patents pending in U.S. and Canada. See www.EnduraPatents.com. #211159-BD -SNAPRET